

# Manual Deactivation Of Emergency Warning Siren



Open the lower cabinet on the siren pole.



Turn off the battery disconnect switch.